
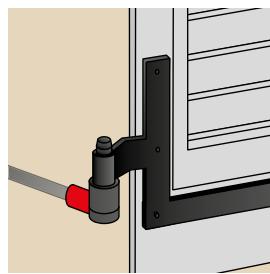


Gond sur plaque axe laiton



| Ancien code | Nouveau code | ØD | L | Dispo. (sem.) |
|-------------|----------------|------|------------|---------------|
| S901314Z | G901314 | 316L | Ø14 100 10 | 1 |
| S901314 | G901314 | 316L | Ø14 100 10 | 1 |
| S901316Z | G901316 | 316L | Ø16 180 10 | 1 |
| S901316 | G901316 | 316L | Ø16 180 10 | 1 |

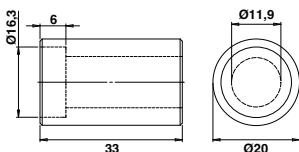

Entretoise pour POLYGOND®

| Code | ØD | Dispo. (sem.) |
|---------|------|---------------|
| S900450 | 316L | 150 |

Tourniquets

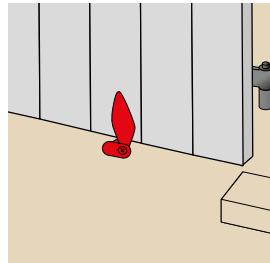

Tourniquet marseillais à vis tête forgée

| Ancien code | Nouveau code | ØD | L | Dispo. (sem.) |
|-------------|----------------|------|--------|---------------|
| S901510Z | G901510 | 316L | 110 10 | 1 |
| S901510 | G901510 | 316L | 110 10 | 1 |
| S901513Z | G901513 | 316L | 130 10 | 1 |
| S901513 | G901513 | 316L | 130 10 | 1 |
| S901518Z | G901518 | 316L | 180 10 | 1 |
| S901518 | G901518 | 316L | 180 10 | 1 |



La mise en œuvre des fermetures est encadrée par le DTU 34-4, s'y référer pour éviter tout danger.

Bien s'assurer que le vantail soit monté plaqué et serré sur la façade.



En cas de vent, fermer les volets.





Pour les volets de grandes tailles, utiliser uniquement les arrêts adaptés

Conseils de pose **P.113**



Plus d'infos sur www.torbel.fr

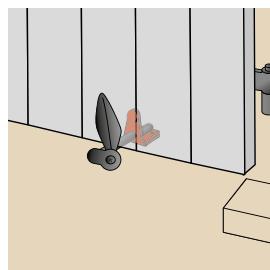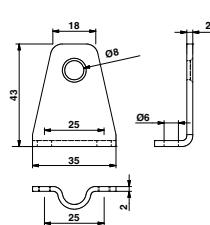

Butée pour tourniquet marseillais Ø10

| Ancien code | Nouveau code | ØD | L | Dispo. (sem.) |
|-------------|----------------|------|----|---------------|
| S901525 | G901525 | 316L | 10 | 1 |