


Gond sur plaque axe laiton

| Ancien code | Nouveau code | 0 | ØD | L | | Dispo. (sem.) |
|----------------|--------------|------|-----|-----|----|------------------|
| S901314Z | G901314 | 316L | Ø14 | 100 | 10 | 1 |
| S901314 | 0901314 | 0.02 | Ø14 | 100 | 10 | ' |
| S901316Z | G901316 | 316L | Ø16 | 100 | 10 | , |
| S901316 | - C301316 | JIOL | 010 | 180 | 10 | 1 |



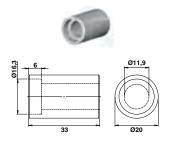


Entretoise pour POLYGOND®

| Code | 0 | (| Dispo. (sem.) | |
|---------|------|----------|------------------|--|
| S900450 | 316L | 150 | 1 | |

Tourniquets



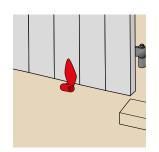

Tourniquet marseillais à vis tête forgée

| - | | | | | |
|----------------|-----------------|------|-----|----|------------------|
| Ancien code | Nouveau code | 0 | L | | Dispo. (sem.) |
| S901510Z | G901510 | 316L | 110 | 10 | 1 |
| S901510 | G901510 | SIOL | 110 | 10 | ı |
| S901513Z | G901513 | 316L | 170 | 10 | 1 |
| S901513 | G901513 | SIGL | 130 | 10 | ľ |
| S901518Z | | 316L | 100 | 10 | _ |
| CONTEIN | G901518 | SIGL | 180 | 10 | 1 |





La mise en œuvre des fermetures est encadrée par le DTU 34-4, s'y référer pour éviter tout danger.



Bien s'assurer que le vantail soit monté plaqué et serré sur la façade.



En cas de vent,



Pour les volets de grandes tailles, utiliser uniquement les arrêts adanté




*

Conseils de pose P.113



Plus d'infos

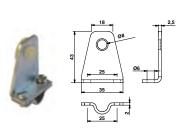



Butée pour tourniquet marseillais Ø10

| Ancien code | Nouveau code | 0 | | Dispo. (sem.) |
|----------------|-----------------|------|----|------------------|
| S901525 | G901525 | 316L | 10 | 1 |